

# abstract

The configuration page implements the main place to configure the system.

## Sections

The configuration file is divided in sections. This is also represented in the configuration file.

### paths

This sections provides some filesystem paths. You can enter them relative or absolut. Relative paths are relative from application root directory.

- **record** The path where obd databases are recorded. Should be some permanent storage.
- **app** Application root path. This path is used as relative root and should be absolut ideally.
- **log** The path where logfiles are stored. Ideally a tmporary storage in RAM

### connections

A section for configuring connections to and from the system.

- **bt\_dev** should point to the OBDII connection. If you're using an ELM327 with Bluetooth it will be mostlikely a /dev/rfcomm device
- **wifi\_pwd** This system is designed with a wifi hotspot. Here you specify the WPA2 key.
- **gps\_dev** specifies the GPS source. This is usually some kind of serial device. ttyS0 for example

### startup

Controls the startup behaviour of the system.

- **bt\_connect** automatically connect to a specified bluetooth device after boot
- **autorecord** immediately start recording (start obdgpslogger) after boot. A connection to a OBDII dongle is required.

From:  
<https://wiki.siningsoft.de/> -

Permanent link:  
<https://wiki.siningsoft.de/doku.php?id=mycar:software:design:configuration>

Last update: **2019/03/06 23:16**



